

FURNITURE CARE AND MAINTENANCE



All Leda furniture components are high quality products crafted from premium selected veneers, wood solids complemented decorative hardware. They are meant to keep their beauty and shine year after year. However it is important that you maintain them with care and that you keep in mind the factors that could prematurely deteriorate the wood or the finish of your furniture. This guide is designed to help you take appropriate steps and precautions to protect your investment and get the most out of your new furniture and make it last a lifetime.

Cleaning



- Dust with a soft cloth slightly moistened with water and dry completely with a clean and dry cloth
- Always rub with the wood grain
- Every six months use a mixture of 1 part of lemon juice for 4 parts of water to clean your wood surfaces.

Precautions



- Always use pads beneath accessories when eating, writing.
- To avoid scratches or dents on the surfaces, always place a mat underneath hard surface accessories.
- Avoid letting children play with toys or draw on unprotected surfaces.

Hazards



- Remove spills immediately and dry out the surface with a dry cloth.
- Keep your furniture away from heat sources.
- Avoid using furniture cleaners or polishes.
- Do not place your furniture in areas that are directly exposed to the sun for an extended period of time.
- Avoid contact with hot dishes and pots.
- Avoid contact with harsh solvents.
- Avoid exposure to moisture.
- Always place a strip of felt or leather under accessories sitting on wood surfaces, even if accessory has a plastic or rubber base. Some rubbers and plastics contain chemicals that will leave stains on wood surfaces. They may also soften and injure the finish if left in contact for a long period of time.